

# XDS510PP MPSD Emulator Pod

# Installation Guide

1997

DSP Development Systems

# XDS510PP MPSD Emulator Pod Installation Guide

502222-0001 Rev. C April 1997

SPECTRUM DIGITAL, INC. 10853 Rockley Road Houston, TX. 77099 Tel: 281/561-6952 Fax: 281/561-6037 sales@spectrumdigital.com www.spectrumdigital.com

#### **IMPORTANT NOTICE**

Spectrum Digital, Inc. reserves the right to make changes to its products or to discontinue any product or service without notice, and advises its customers to obtain the latest version of relevant information to verify, before placing orders, that the information being relied on is current.

Spectrum Digital, Inc. warrants performance of its products and related software to current specifications in accordance with Spectrum Digital's standard warranty. Testing and other quality control techniques are utilized to the extent deemed necessary to support this warranty.

Please be aware that the products described herein are not intended for use in life-support appliances, devices, or systems. Spectrum Digital does not warrant nor is liable for the product described herein to be used in other than a development environment.

Spectrum Digital, Inc. assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein. Nor does Spectrum Digital warrant or represent any license, either express or implied, is granted under any patent right, copyright, or other intellectual property right of Spectrum Digital, Inc. covering or relating to any combination, machine, or process in which such Digital Signal Processing development products or services might be or are used.

#### WARNING

This equipment is intended for use in a laboratory test environment only. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to subpart J of part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

#### TRADEMARKS

MS-DOS, MS-Windows, and Windows 95 are registered trademarks of Microsoft Corp.

Copyright © 1996, 1997 Spectrum Digital, Inc.

# Contents

1	Inst	talling the Emulator	1-1		
	Lists the hardware and software you'll need to install the XDS510 emulator pod.				
	1.1	What You'll Need	1-2		
		Hardware checklist	1-2		
		Software checklist	1-2		
	1.2	Step 1: Connecting the Emulator to your PC	1-3		
		Preparing the emulator for installation	1-3		
	1.3	Step 2: Connecting the Emulator to Your Target System	1-4		
		Setting up the "XDS510PP.INI" file	1-5		
		Resetting the emulator	1-6		
	1.4	Utility Programs	1-6		
2	Spe	cifications for Your Target System's Connection to the Emulator	2-1		
	Con	tains information about constructing a 14-pin connector on your target system and			
	infor	mation about connecting the emulator to the target system.			
	2.1	Designing Your Target System's Emulator Connector (14-pin Header)	2-2		
	2.2	Bus Protocol	2-3		
	2.3	Emulator Pod Logic	2-4		
	2.4	Emulator Pod Signal Timing	2-6		
	2.5	Buffering Signals Between the Emulator and the Target System	2-7		
	2.6	Emulation Timing Calculations	2-10		
	2.7	Mechanical Dimensions for the 12-Pin Emulator Connector	2-13		

# **Chapter 1**

# Installing the XDS510PP MPSD Emulator Pod

This chapter helps you install the XDS510PP MPSD emulator pod on a PC running Windows or Windows 95. When you complete the installation, refer to the appropriate *C Source Debugger User's Guide* for software installation.

Topic		Page
1.1	What You'll Need	1-2
	Hardware checklist	1-2
	Software checklist	1-2
1.2	Step 1: Connecting the Emulator to your PC	1-3
	Preparing the Emulator pod for installation	1-3
1.3	Step 2: Connecting the Emulator to Your	
	Target System	1-4
	Setting up the "XDS510PP.INI" file	1-5
	Resetting the emulator	1-6
1.4	Utility Programs	1-6

#### 1.1 What You'll Need

The following checklists detail items that are shipped with the XDS510PP MPSD emulator and additional items you'll need to use these tools.

#### Hardware checklist

—	host	An IBM PC/AT or compatible ISA/EISA-based PC with a hard- disk system and a 1.44M floppy-disk drive
	memory	Minimum of 640K; in addition, if you are running under Microsoft Windows, you'll need at least 256K of extended memory
	display	Monochrome or color (color recommended)
	parallel port	One centronics printer port, bidirectional for 4 bit, 8 bit, or EPP compatible,
	emulator module power requiremen	5 Volts DC (125 milliamps) <b>ts</b>
	target system	A board with an appropriate target device
	connector to target system	12-pin connector (two rows of six pins) see Chapter 2 for more information about this connector
	optional hardware	A Microsoft-compatible mouse
		An EGA or VGA compatible graphics display card and a large monitor. The debugger has several options that allow you to change the overall size of the debugger display. If you have an EGA or VGA compatible graphics card, you can take advantage of some of these larger screen sizes. These larger screen sizes are most effective when used with a large (17" or 19") monitor. (To use a larger screen size, you must invoke the debugger with an appropriate option. For more information about options, refer to the invocation section in Chapter 1, <i>Overview of a Code Development and Debugging System, in the TMS32OC5x C Source Debugger User's Guide.</i> )
	miscellaneous materials	Blank, formatted disks 25 Conductor Printer Cable

#### Software checklist

- \_\_\_ operating system Micrsoft Windows 3.1 or Windows 95
- \_\_\_ required file *emurst.exe* resets the XDS510PP emulator pod

#### 1.2 Step 1: Installing the XDS510PP MPSD Emulator Pod

This section contains the hardware installation information for the emulator pod.

#### Preparing the emulator board for installation

The printer port connection on the back of the PC is a 25 Pin Female D connector. Connect one end of the supplied cable to the printer port that you intend to use (LPT1 or LPT2). Connect the other end of the cable to the 25 pin connector on the XDS510PP emulator pod. The XDS510PP is also known as a scan path adapter.

The XDS510PP can be powered from two different sources. The easiest is to use power from the target system. This is done automatically when the target cable is connected. The pod uses the PD pin on the cable. The trace going to this pin on the target board must be able to carry the current requirements of the pod. The second source of power is the included 5 volt power supply

**Warning:** The power input to the pod must be regulated. Voltages higher than 5 volts will destroy the emulator

Note: The external power supply must be used for 3 volt target systems.

Target Cable Connectors:

Be very careful with the target cable connectors. connect them gently; don't force them into position, or you may damage the connectors.

Do not connect or disconnect the 25-pin D connector while the PC is powered up.

Do not connect or disconnect the 12-pin cable while the target system is powered up.

#### 1.3 Step 2: Connecting the XDS510PP to Your Target System

Figure 1-1 shows how you connect the XDS510PP emulator pod and 25 conductor cable to your target system. In most cases, the target system will be a target board of your own design.

Figure 1-1. Connecting the XDS510PP Emulator Pod to Your Target System



#### Setting up the XDS510PP.INI file

The *xds510pp.ini* file is used to set driver parameters. The ".INI" should be located in the same directory as the HLL Debugger. The D\_DIR environment variable is used to select the Debugger directory. If the *xds510pp.ini* file doesn't exist or can't be found certain parameters are used as default. Shown below are the parameters and their defaults.

#### speed = 25 mode = spp4 port -p command line parameter, or 240 if no command line

When the *xds510pp.ini* file is invoked there are four parameters which can be used. These parameters are: speed, port, mode, and timing.

The 'speed' parameter selects the amount of delay between port accesses. The higher the value the more delay added. A good value to start with is 25.

#### example: speed = 25

The 'port' parameter selects the PC's printer port. The default value is 378. Other values are 278 and 3BC.

#### example: port = 278

The mode parameter selects the type of hardware supported by the host PC. The three modes are shown in the table below:

Modes	Description
spp4	standard parallel port
spp8	bi-directional port
ерр	enhanced parallel port

**Table 1: Parallel Port Modes** 

The "spp4" mode should work on all machines, but is the slowest. The "spp8" mode requires a bidirectional parallel port. The "epp" mode is the fastest but requires an EPP compatible parallel port on the host PC. If you are using EPP mode you must make sure the PC is configured for EPP operation. Check the documentation that came with the PC or add-in card on how to configure the parallel port. The default mode is "spp4".

#### example: mode = epp

The timing parameter is used to select alternate timing for the TDI and TMS signals. The default operation is to change the state of these signals on the falling edge of the TCK\_RET signal. When alternate timing is selected TDI and TMS are changed to the rising edge of the clock. The default mode is to use the default timing.

#### example: timing = alternate

As shipped from the factory the *xds510pp.ini* file has the parameters set as:

speed = 25 mode = epp port = 378

#### Resetting the emulator

To reset the emulator, execute the *emurst.exe* file from the file manager or explorer. The emulator should respond with no errors.

#### 1.4 Utility Programs

There are several utility programs that can be found in the installation directory. One such program is "PORTCHK". This program searches for parallel ports and tries to detect if they are bi-directional. To run this program type "PORTCHK" at the command line prompt. This program does not require any arguments.

There may be other utility programs on the diskette that is shipped with the XDS510PP. These programs may aid you in installing the XDS510PP on a particular PC hardware configuration. Refer to the 'readme' files or the 'port utilities' manual for their use.

Spectrum Digital, Inc

# Chapter 2

# Specifications for Your Target System's Connection to the Emulator

This chapter contains information about connecting your target system to the emulator. Your target system must use a special 12-pin connector for proper communication with the emulator.

Горіс	opic	
2.1	Designing Your Target System's Emulator	
	Connector (12-pin Header)	2-2
2.2	Emulator Cable Pod Logic	2-3
2.3	Emulator Cable Pod Signal Timing	2-4
2.4	Buffering Signals Between the Emulator and the	
	Target System	2-5
2.5	Mechanical Dimensions for the 12-Pin Header	2-7

#### 2.1 Designing Your Target System's MPSD Emulator Connector (12-pin Header)

The 'C3x devices support complete emulation through a dedicated serial scan path port. This port uses a modular port scan technology (MPSD). For the application target system to communicate with the EMU320C3x your target system must have a 12-pin header(2x6). The pin signal assignments are shown in figure 2-1. Pin 8 is removed for keying purposes.

Figure 2-1. 12-Pin Header Signals and Header Dimensions

1	2	GND	
3	4	GND	Header Dimensions
5	6	GND	Pin-to-Pin spacing, 0.100 in. (X,Y)
7	8	no pin (key)	Pin width, 0.025-in. square post
9	10	GND	Pin length, 0.235-in. nominal
11	12	GND	
	1 3 5 7 9 11	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	1       2       GND         3       4       GND         5       6       GND         7       8       no pin (key)         9       10       GND         11       12       GND

**Note:** Signals EMU0, EMU1, EMU2 should always be pulled up with a separate 20k ohm resistors to Vcc.

Position pin 8 will be plugged to prevent improper connection. Pin 8 is present in the cable and is grounded.

EMU320C3X Signal	Description	ʻC30 Pin Number	ʻC31 Pin Number	<sup>·</sup> C32 Pin Numbers
EMU0	Emulation Pin 0	F14	124	14
EMU1	Emulation Pin 1	E15	125	17
EMU2	Emulation Pin 2	F13	126	18
EMU3	Emulation Pin 3	E14	123	13
H3	'C3x H3	A1	82	108
PD Presence detect. Indicates that the emulation cable is connected and that the target is powered up. PD should be tied to +5 volts in the target system.				nnected and is in the

**Table 1: 12-Pin Header Signal Description** 

Although you can use other headers, recommended parts include:

straight header, unshrouded	DuPont Connector Systems
-	part # 65610-112
	part #65611-112
	part # 37996-112
	part # 67997-112

#### 2.2 Emulator Cable Pod Logic

Figure 2-2 shows a portion of the logic in the EMU320C3x emulator pod. Please note the 33 ohm resistors have been added to the EMU0, EMU1, and EMU2 lines. These resistors minimize cable reflections.





#### 2.3 Emulator Cable Pod Signal Timing

Figure 2-3 shows the signal timings for the emulator. Table 2-2 defines the timing parameters for the emulator. The timing parameters are calculated from standard data sheet parts used in the emulator and cable pod. These parameters are for reference only. Spectrum Digital does not test or guarantee these timings.

Figure 2-3. Emulator POD Timing



**Table 2: Emulator Pod Timing Parameters** 

No.	Reference	Description	Min	Max	Units
1	t <sub>H3min</sub>	H3 period	30	200	ns
	t <sub>H3max</sub>				
2	t <sub>H3highmin</sub>	H3 high pulse duration	8		ns
3	t <sub>H3lowmin</sub>	H3 low pulse duration	8		ns
4	td <sub>(EMU0,1,2)</sub>	EMU0, 1, 2 valid from H3 low	1	5	ns
5	tsu <sub>(EMU3)</sub>	EMU3 setup time to H3 high	3		ns
6	thd <sub>(EMU3)</sub>	EMU3 hold time from H3 high	0		ns

#### 2.4 Buffering Signals Between the Emulator and the Target System

It is extremely important to provide high-quality signals between the emulator and the 'C3x on the target system. In many cases, the signal must be buffered to produce a high-quality signal. The need for signal buffering and placement of the emulation header can be divided into three categories:

No signal buffering. In this situation, the distance between the header and the 'C3x should be no more than 2 inches.



Buffered emulation signals. In this situation, the distance between the emulation header and the 'C3x is greater than 2 inches but less than 6 inches. The transmission signals ---H3 and EMU3--- are buffered through the same package.



\_\_\_\_

All Signals buffered. The distance between the emulation header and the 'C3X is greater than 6 inches but less than 12 inches. All 'C3X emulation signals --EMU0, EMU1, EMU2, EMU3, and H3 -- are buffered through the same package.



#### 2.5 Mechanical Dimensions for the 12-Pin Emulator Connector

The EMU320C3x emulator consists of a 6-foot 25 conductor cable, the **XDS510PP** Scan Path Adapter, and a short section of cable that connects to the target system. The overall cable length is approximately 6 feet, 10 inches. Figure 2-4 and Figure 2-5 (page 2-8) show the mechanical dimensions for the **XDS510PP** Scan Path Adapter and short cable. Note that the pin-to-pin spacing on the connector is 0.100 inches in both the X and Y planes. The **XDS510PP** enclosure is nonconductive plastic with four recessed metal screws.

Figure 2-4. Pod/Connector Dimensions



Note: All dimensions are in inches and are nominal dimensions, unless otherwise specified.

#### Spectrum Digital, Inc





Note: All dimensions are in inches and are nominal dimensions, unless otherwise specified.

# INDEX

# A

addresses port 1-5

### B

```
-batch files
emurst 1-3
xds510pp.ini 1-9, 1-10
invoking
xds510pp.ini 1-9
bus protocol 2-3
```

# С

cable pod 1-5, 2-4 to 2-6 connector target system emulator 1-4, 2-1 to 2-8

# D

display requirements 1-2

## Ε

emulation timing calculations 2-4

emulator additional tools 1-3 connection to target system 1-4, 2-1 to 2-8 mechanical dimensions 2-7 to 2-8 host system 1-2 installation 1-3 operating system 1-2 requirements *display* 1-2 *graphics card* 1-2 *hardware* 1-2 *memory* 1-2 *mouse* 1-2 *power* 1-2 *software* 1-3 resetting 1-6 signal buffering 2-5, 2-6 25 conductor cable 1-4 *header design* 2-2 to 2-3 target system 1-2 emurst file 1-2, 1-6

# G

graphics card requirements 1-2

# Η

hardware checklist 1-2 host system 1-2

installation XDS510PP 1-3

# Μ

Microsoft Windows using with the emulator 1-2

# O

operating system 1-2 optional files 1-6

# Ρ

-port addresses 1-5 power requirements board 1-2 protocol bus 2-4

# R

required files 1-2 required tools 1-2 resetting 1-6

# S

signal buffering for emulator connections 2-5 to 2-6

software checklist 1-2

### Т

target system 1-2 connection to emulator 1-4, 2-1 to 2-8 test clock 2-8 timing for TDI and TMS signals 1-10 timing calculations 2-4

# Х

xds510pp.ini file 1-5

Spectrum Digital, Inc

